



## Helpful Hints

- Do not fully tighten your frame prior to putting on the tent, it should be able to have some give so that the tent will fit snugly on the frame.
- Line up your front and rear roof seams with the frame, makes it easier to slip down.
- Do not install the wall poles until your tent is over the roof frame.
- Slowly pull each corner over the frame and then pull down equally on each corner.
- Do not put away wet.
- Always store in a dry, vermin free area.
- It is important to note that we use Grade A, flawless canvas that is pre-shrunk, however due to the nature of canvas some additional shrinkage (up to 4% under normal use) may occur depending on environmental conditions. If this happens and your tent is extra tight on the frame, simply cut down your poles to fit. Be aware that the canvas can relax also in a different environment so be careful how much you choose to remove on your poles.
- Make sure all your windows and doors are zipped close when storing tent.
- ALWAYS put it together before you go out camping or hunting, this will ensure a smooth process when you are ready to use it.
- Condensation can occur, it is natural when cold and warm air meet. Proper ventilation can minimize this from happening.